



4A IF MOTOR LOCKED TO SHAFT
 REMOVE BLACK BEARING CAP
 RELEASE LOCK TAB TAP WITH HAMMER
 TO UNDO BEARING COLLAR
 TAP TAPER LOCK BEARING BACK TO RELEASE
 REMOVE MOTOR SHAFT AND HAMMER ASSEMBLY
 TO DO SO CUP HAMMERS IN HAND TO REMOVE
 REPLACE HAMMERS. RELOCK BEARING

HAMMER REPLACEMENT

2 UNDO LED LIGHT WIRE FROM CAPACITOR BOX - NOT PLASTIC HOUSING ON BUCKET LID

3 UNDO 12MM MOTOR MOUNTING CAP SCREWS

4 PRY MOTOR OFF SHAFT USING HEAVY SCREW DRIVER
 DO NOT FORCE.
 IF LOCKED UP SEE NOTE 4a ABOVE

1 LEAVE BEARING LOCKED

7 REPLACE HAMMERS WITH CORRECT ROTATION
 EX 250X150X9_RHS

5 AFTER MOTOR REMOVED TIP MACHINE ON SIDE

6 WORK HAMMER PINS OUT SO THAT HAMMERS CAN BE REMOVED

8 REASSEMBLE MOTOR

9 RUN UP AND CHECK THAT MACHINE RUNS SMOOTHLY

10 IF THERE IS UNUSUAL NOISE LOOSEN BEARING BOLTS

11 TAP TO ALIGN WITH NO NOISE AND RETIGHTEN

12 IF NOISE PERSIST CONTACT EXPLECO